

POPULAR COMMANDS

All Views

Adjust brightness	Shift + Learn + turn ▼▲ knob
Current zoom level	Push ◀▶ knob, turn to change zoom level
Scroll left-right	Turn ◀▶ knob
Scroll up-down	Turn ▼▲ knob
Metronome	Shift + Tap Tempo
Load song (with saved tempo)	Load, turn Select knob, Load
Load song (with current tempo)	Load, turn Select knob, push Tempo knob + Load
Delay load	After pressing Load, turn Select knob
Delete song	Shift + Save
New song	Shift + Load, Load
Resample	Shift + Record
Loop resample	Record + Play, Record + Play
Tempo 1 BPM increments	Push and turn Tempo knob
Swing amount	Shift + turn Tempo knob
Nudge clock	Push ◀▶ knob + turn Tempo knob
Settings menu	Shift + push Select knob
Undo	Back
Redo	Shift + Back

Parameter knob push functions

(UR = upper right, LL = lower left, PK = parameter knob)

LP, HP, EQ	P2 LED on, push URPK
LPF slope	P2 LED on, push LLPK
Ping-pong on/off	P4 LED on, push URPK
Delay style: digital/analog	P4 LED on, push LLPK
Compressor sync: 32nd/8th	P5 LED on, push URPK
Reverb room size	P5 LED on, push LLPK
Effect song or kit: chorus, flanger, or phaser	P6 + Affect Entire LED on, push URPK
Effect song or kit: depth, offset, feedback	P6 + Affect Entire LED on, push LLPK
Stutter	P7 LED on, push URPK (push + turn to ramp speed)

Song View

Track Parameter adjust	Hold Grid pad of track + turn Parameter knob
Change Section assignment/colour	Shift + Section pad
Section repeats/share status	Push Section pad + turn Select knob
Move Row	Hold Grid pad of Track to move + turn ▼▲ knob

Clone track	Hold Grid pad of master track + tap pad of another row
Solo section	Double-tap Section pad
Instant mute/launch	Shift + Mute pad
Solo Track (arm)	Hold down $\blacktriangleleft\triangleright$ knob + press Track's Launch Pad
Solo Track (immediate)	Hold down $\blacktriangleleft\triangleright$ knob + Shift + press Track's Launch Pad
Un-solo	Press Track's Launch pad
Delete Track	Hold Grid pad on Track to delete + press Save/Delete

Track View

Change Track colour	Shift + turn $\blacktriangledown\blacktriangle$ knob
Change Track preset or MIDI ch or CV out	turn Select knob
Adjust Track length	Shift + turn $\blacktriangleleft\triangleright$ knob
Duplicate and append track content	Shift + push $\blacktriangleleft\triangleright$ knob
Horizontal track shift	Push $\blacktriangledown\blacktriangle$ knob + turn $\blacktriangleleft\triangleright$ knob
Note length	Hold note start Grid pad + tap end Grid pad
Note length (long)	Note start Grid pad, turn $\blacktriangleleft\triangleright$ knob, push $\blacktriangleleft\triangleright$ knob + end Grid pad
Note velocity	Hold Grid pad + turn $\blacktriangleleft\triangleright$ knob
Parameter Automation	With record LED on, turn Parameter knob
Per note parameter change	Note start Grid pad + turn Parameter knob
Delete parameter automation	Shift + push Parameter knob
Clear Track	Push $\blacktriangleleft\triangleright$ knob + back
Load sample	Audition pad + load
Enter Sound Editor	Shift + (shortcut labeled) Grid pad or push Select knob
Begin playback from current screen	Push $\blacktriangleleft\triangleright$ knob + Play
Set Probability % a note plays	Hold Grid pad + turn Select knob left
Set several notes to play only when first plays	Hold all Grid pads at same time + turn Select knob left
Set iteration dependence for a note	Hold Grid pad + turn Select knob right
Copy notes	Hold Learn + push $\blacktriangleleft\triangleright$ knob
Paste notes	Hold Learn + Shift + push $\blacktriangleleft\triangleright$ knob
Copy automation	Hold Learn + push Parameter knob
Paste automation	Hold Learn + Shift + push Parameter knob

Sound Editor

Move cursor	Turn $\blacktriangleleft\triangleright$ knob
Parameter/MIDI knob assignment	Learn + turn Parameter knob or learn + MIDI knob
Unassign MIDI knob	Shift + Learn
Save preset	Save

Synth, Keyboard, MIDI, CV Tracks

Synth resample	Record + Audition or Grid pad
Load blank synth	Shift + Synth

Cycle default scales	Shift + Scale
Change root note	Scale + Audition pad
Chromatic scale	Scale LED off
Create scale	With scale LED off, select notes using the Grid pads, press the scale button
Alter current scale	Audition pad + push and turn Select knob
Transpose current track an octave	Push + turn ▼▲ knob
Transpose current track a semitone	With scale LED off, Shift + push and turn ▼▲ knob
Transpose all tracks a semitone	With scale LED on, Shift + push and turn ▼▲ knob
Create drone note	Create a note that occupies the visible screen length
Assign midi CC to Parameter knob (MIDI track)	Push Parameter knob + turn Select knob

Kit Tracks

Change colour of a specific kit row	Shift + Audition pad + turn ▼▲ knob
Create new kit	Shift + Kit
Slice sample	Shift + Kit, turn Select knob to find sample, Shift + push Select knob
Record sample from input	Audition pad + Record to start, Record to end
CV trig kit row	Audition pad + push and turn Select knob
Move row	Audition pad + turn ▼▲ knob
Delete row	Hold Grid pad on row to delete + press Save/Delete